


LCD MONITOR

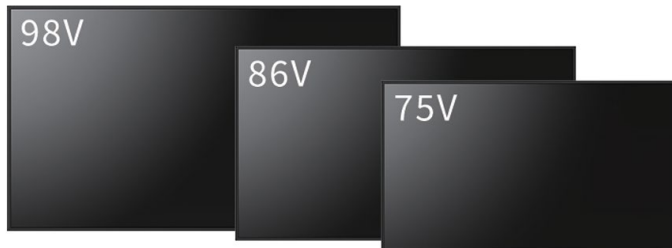

PN-ME752
PN-ME862
PN-ME982

MODEL

Dismantle Instruction

Table of contents

1. Scope.....	3
2. Tools for dismantling.....	3
3. Dismantle Procedure	3
4. Batteries	4
5. Back covers	5
(1) PN-ME752.....	5
(2) PN-ME862.....	6
(3) PN-ME982.....	7
6. PWB and other electronic components.....	8
(1) MAIN PWB	8
(2) POWER PWB	8
(3) T-CON PWB	9
(4) KEY PWB.....	10
(5) IR PWB	10
(6) WIFI CTL PWB.....	10
(7) SPEAKER	11
7. Parts List	11

1. Scope

This document describes dismantling instruction according to Annex VII of Directive 2012/19/EU.

2. Tools for dismantling

- Screw Driver
- Nipper

3. Dismantle Procedure

This product can be dismantled by below steps.

1. Remove Back covers (section 5)
2. Remove Printed circuit boards (section 6)

4. Batteries

This model uses only AAA battery for remote control.


Battery can easily be removed.





5. Back covers

back cover can be removed by screw driver.


(1) PN-ME752

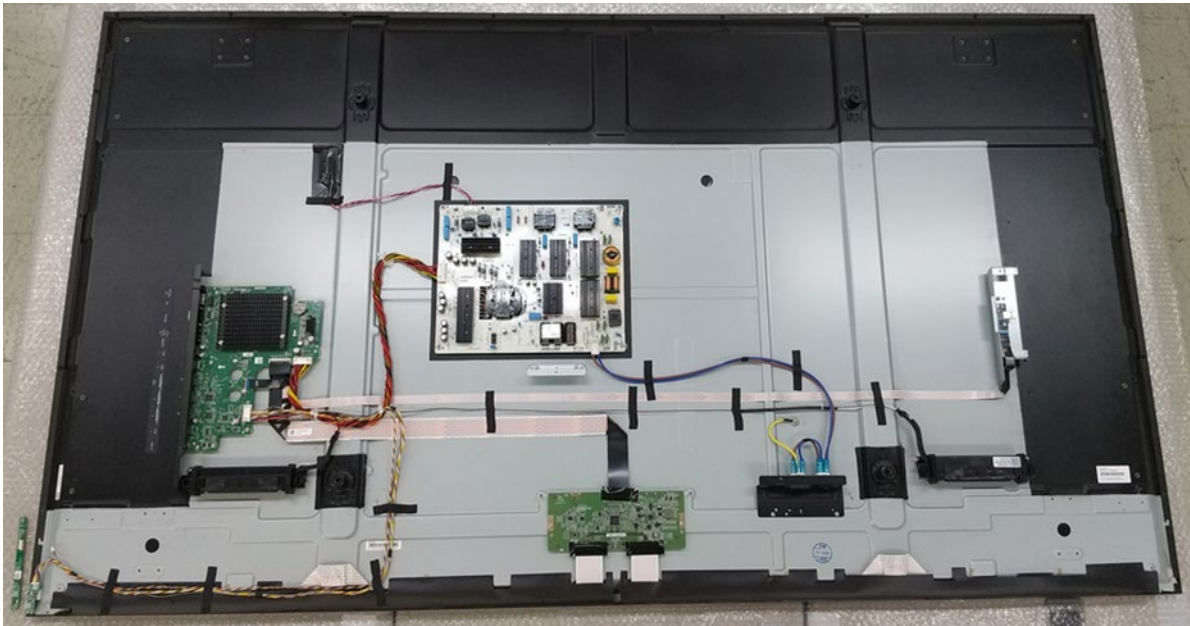

(2) PN-ME862

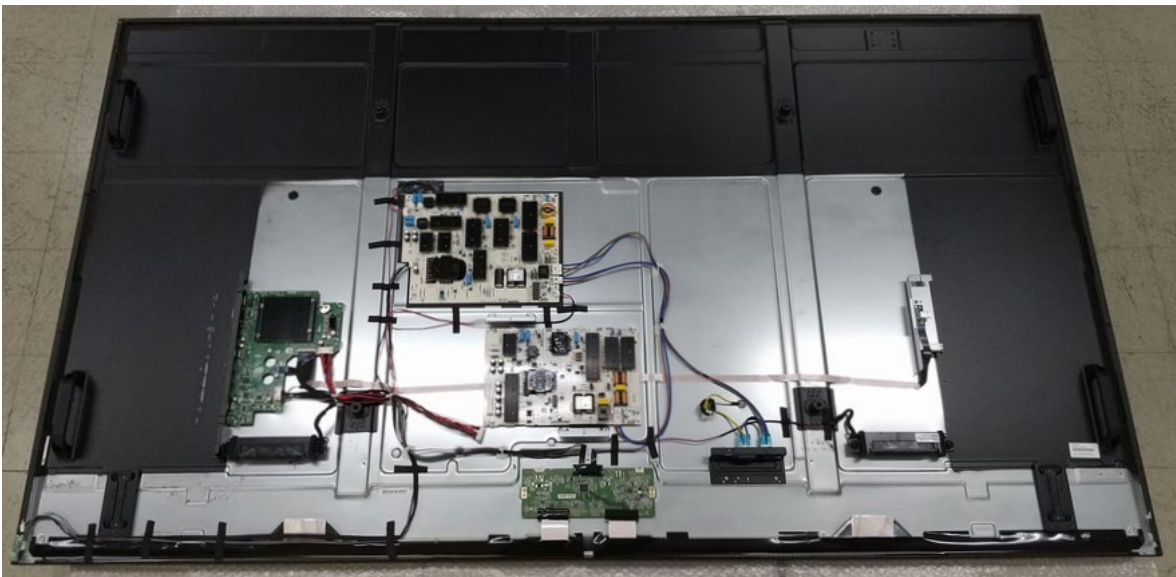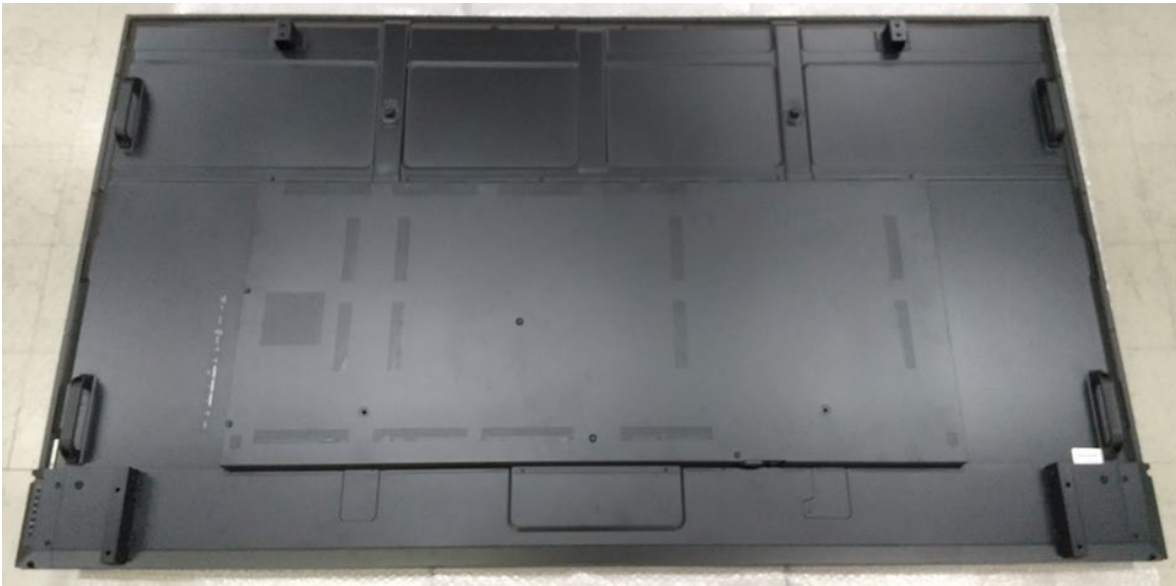

(3) PN-ME982

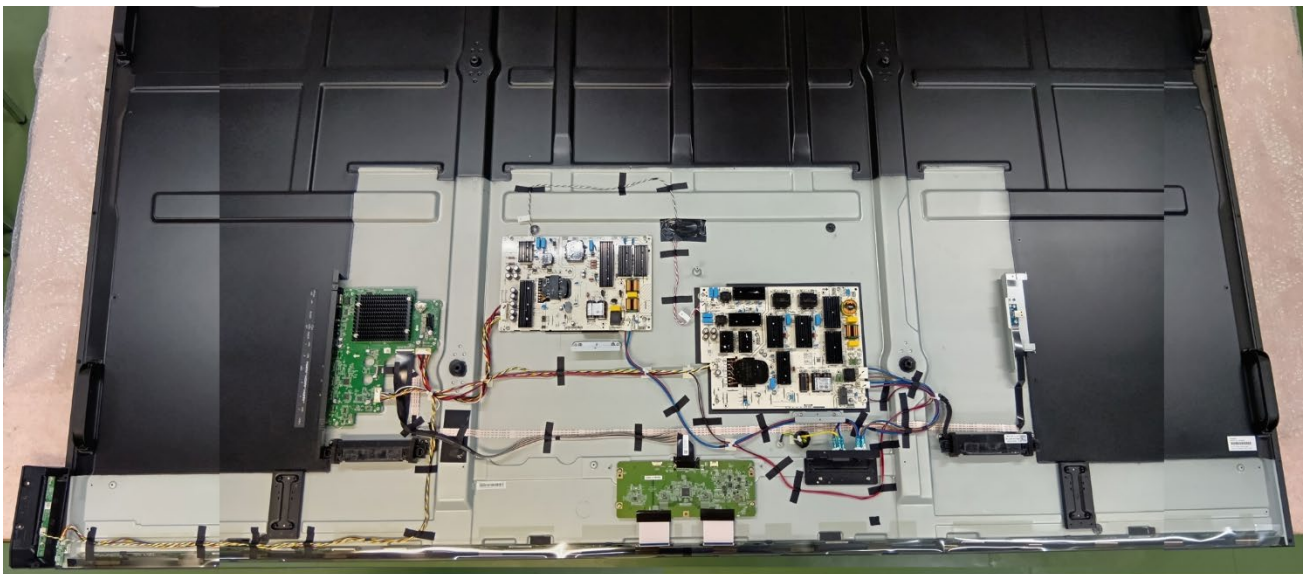

6. PWB and other electronic components

All electronic components can be removed by screw driver.

(1) MAIN PWB



(2) POWER PWB

- POWER BD ME752 for ME752




- POWER BD ME862-A (for ME862)



- POWER BD ME862-B (for ME862/ ME982)



- POWER BD ME982-A (for ME982)

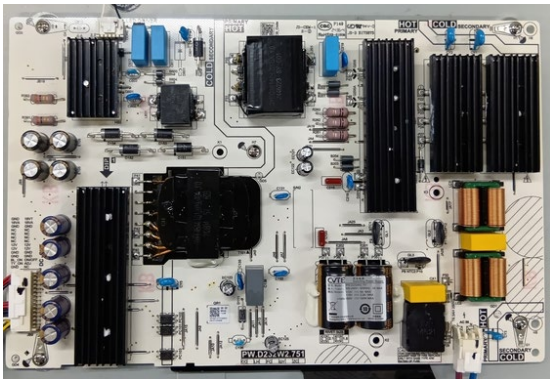

(3) T-CON PWB


- PN-ME752



- PN-ME862



- PN-ME982

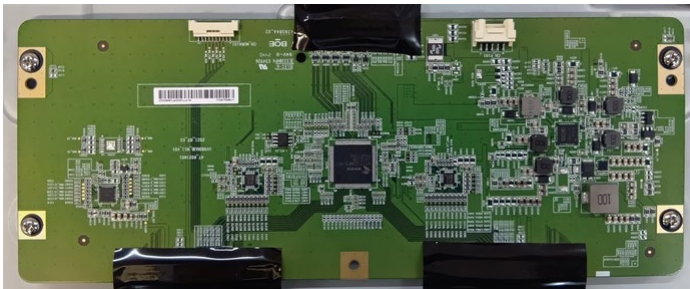

- (4) KEY PWB



- (5) IR PWB



- (6) WIFI CTL PWB



(7) SPEAKER



7. Parts List

The spare parts listed in the column "Spare Parts" below are kept available in accordance to legal requirements of EU Regulation 2019/2021 for professional repairer.

Spare Part	Part Name/ Element of Part
a. Internal power board	Power PWB
b. Connectors to connect external equipment	Main PWB
c. Batteries and Accumulators	not applicable
d. DVD/Blue-Ray module	not applicable
e. HD/SSD module	not applicable